

# Multimedia Headset

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Multimedia Headset delivers full frequency coverage for use with your computer. The headset is lightweight with an adjustable headband for a good fit. The microphone boom's 270° rotation angle lets you use the OmniDirectional microphone comfortably. The headset's 8-foot cord allows you a wider range of movement, while the gold-plated connections provide the cleanest signal possible.

## OPERATION

**Caution:** Turn down the volume on your sound source before connecting the headset.

Insert the headset's orange plug into the 1/8-inch (3.5-mm) stereo phone (SPEAKER OUT) jack on your PC's sound card, and the headset's pink plug into the microphone jack on your computer's sound card.

Put on the headset, then adjust the headband and microphone boom for a comfortable fit, and the sound source's volume to a comfortable level.

## Listening Safely

To protect your hearing, follow these guidelines when you use a headset.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.

- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

## CARE

Keep the headset dry; if it gets wet, wipe it dry immediately. Use and store the headset only in normal temperature environments. Handle the headset carefully; do not drop it. Keep the headset away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the headset's internal components can cause a malfunction and might invalidate its warranty. If your headset is not performing as it should, take it to your local RadioShack store for assistance.

## SPECIFICATIONS

### Frequency Response

Headphone ..... 30–15 kHz  
Microphone ..... 100–10 kHz

### Sensitivity

Headphone ..... 100 dB ± 5 dB  
Microphone ..... -40 dB ± 5 dB  
Impedance ..... 32 ohms  
Maximum Power Input ..... 100 mW  
Gold-Plated Plugs ..... 1/8 inch (3.5 mm)  
Length of Cord ..... 8 ft. (2.44 m)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99